



The New Leader in the Vapor Barrier Industry

## Penetrations

Penetrations: All penetrations must be sealed. Inspect the area and determine if the space around the pipe is Small or Large. A Small space can be sealed with the Xtreme Tape. A Larger space it will need to be sealed with an Xtreme Patch. Please see below for details.

1. Small or minimum space around pipe: Place the Xtreme Tape around the pipe, insuring the tape has covered the pipe and is attached to the Xtreme Vapor Barrier more than adequately. (See figure 1A, 1B )

Figure 1A


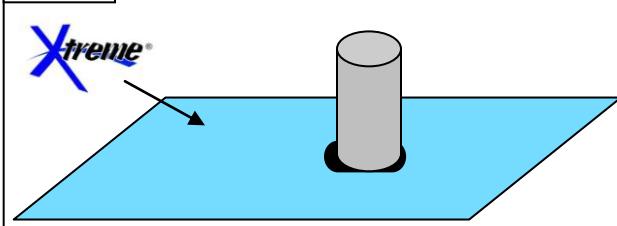


Figure 1B

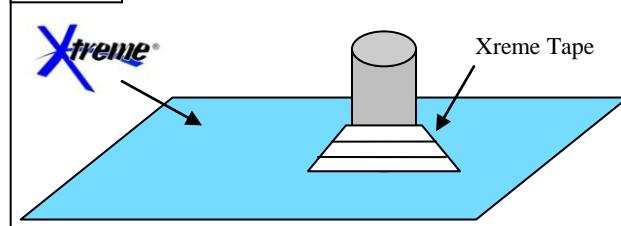

2. Larger spaces around pipe: Cut a piece of Xtreme in a shape, larger than the repair, insuring a minimum six inch overlap in all directions and tape all of the edges. Cut an X the size of the pipe or slightly smaller for a snug fit and slide the patch over the pipe and seal the pipe with the Xtreme Tape. ( See figure 2A, 2B )

Figure 2A


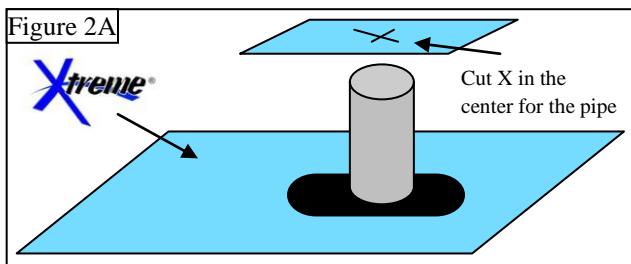


Figure 2B



Note: For maximum adhesion of the tape, apply the Xtreme Tape immediately after the Tex-Trude Xtreme Vapor Barrier Patch has been placed. The area should be free from dirt, dust, and moisture.

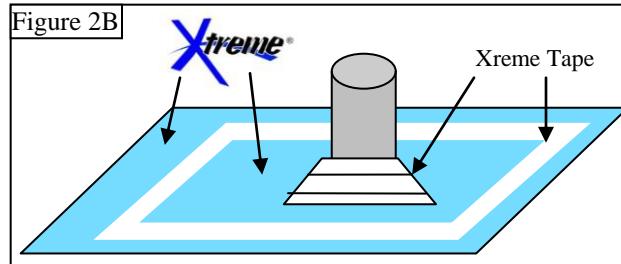

Tex-Trude, LP. . P.O. Box 58 . Channelview, TX . 77530  
Off: 281.452.5961 Fax: 281.452.5642



9001-2008  
CERTIFIED